
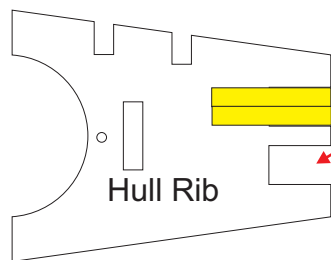
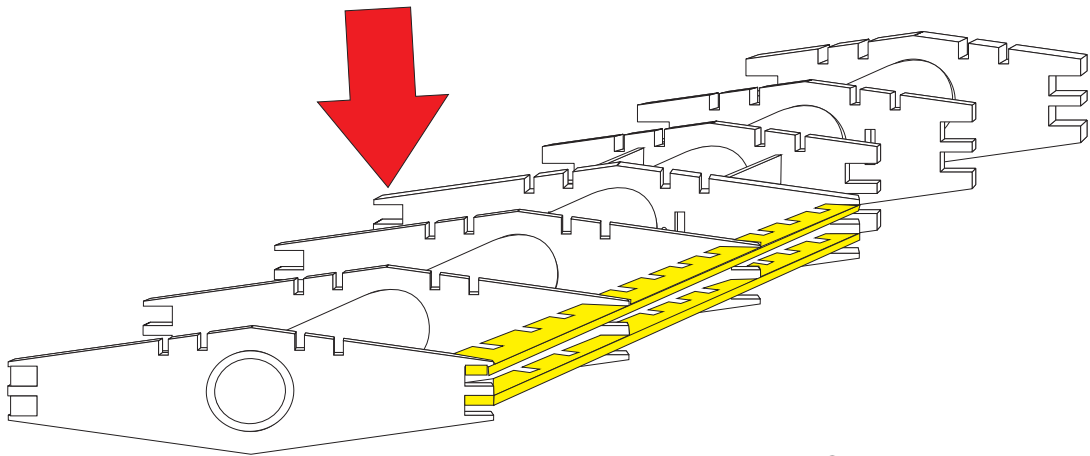


# UNIVERSAL RIB SPACER INSTRUCTIONS

**FOR USE ON ANY HULL**

Except 04 Fast Attack as it has a different design

**NOTE:** These instructions are taken from the 01 small freighter instructions sheet.

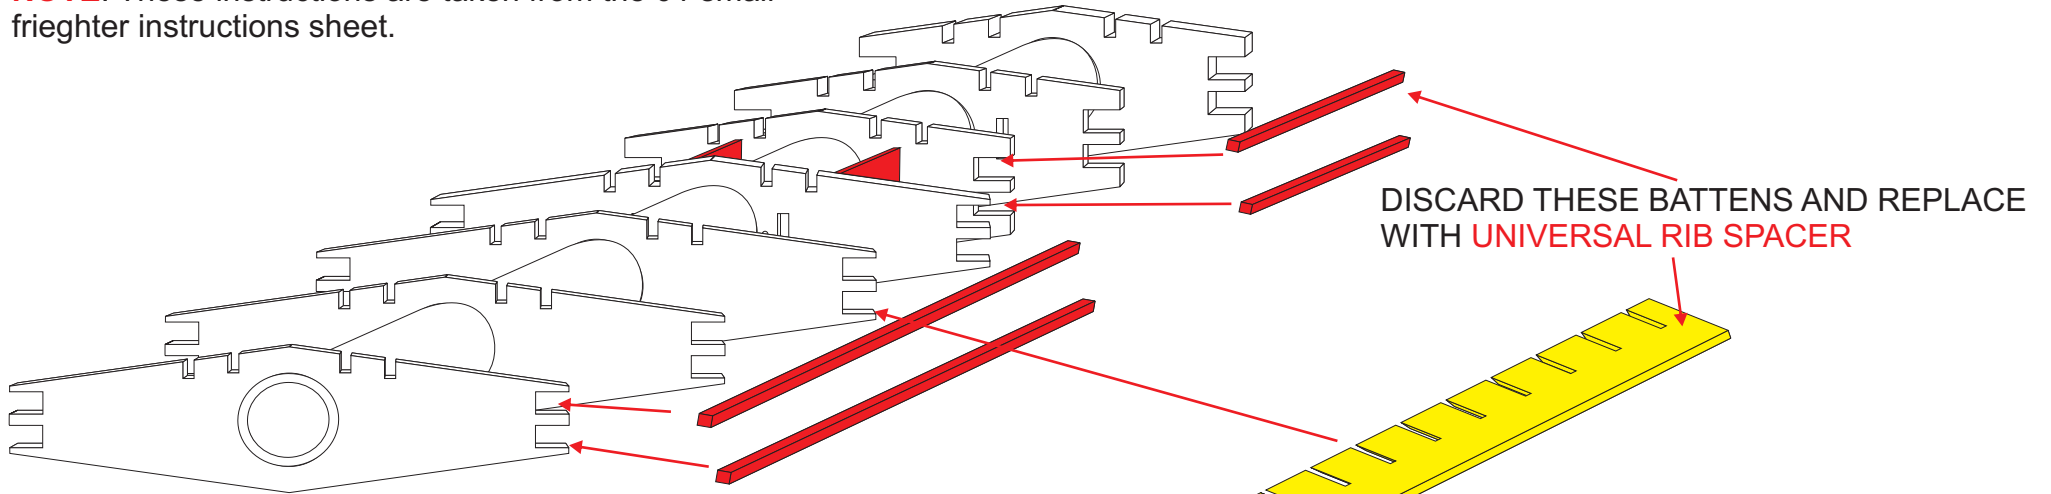

**NOTE**  
2 Universal Rib Spacers (6mm thick) will fit in the notches (12mm wide) at either end of the ribs of any of the hull except **04 Fast Attack**.

